

NP88 – NUMERIC PAGER



QUICK START GUIDE





Turn On:

Press  button once

Read Message:

Press  button. Press  button again for time & date stamp.






Delete Pages:

While page is displayed press  button twice. Press  button once.







Change Alert:

While date & time are displayed on screen press  button until screen reads "ALERT MODE?" Press  button. Press  button to advance choices. Press  button to accept changes.

Set Date:

While date & time is displayed press  button until "SET TIME" is displayed. Press  button once. Press  button to change setting. Press  button to advance to the next field. Press  button twice to accept changes.

Alarm Function:

While date & time are displayed on screen press  button until screen reads "SET ALARM?" Press  button. Press  button to change on/off. Press  button to advance to next setting. Press  button to change time. Press  button to accept.

*A small bell will be displayed to the left of the screen.

** Alarm function does not work if pager is on vibrate

Alert Sound:

While date & time are displayed on screen press  button until screen reads "SET ALERT?" Press  button. Press  button to advance choices. Press  button to accept.

For more information call RadioWorks at – (250) 475-3400 OR Email Paging@radioworks.ca